2. Schedule

A: MAINTENANCE SCHEDULE 1

		MAINTENANCE INTERVAL [Number of months or km (miles), whichever occurs first]																	
	Months	3 7.5 15 22.5 30 37.5 45 52.5 60 67.5 75 82.5 90 97.5 105 112.5 120																	
	× 1,000 km	4.8	12	24	36	48	60	72	32.3 81.4	96	108			144			180	192	Remarks
	× 1,000 km × 1,000 miles		7.5	15	22.5	30	37.5	45	52.5		67.5		82.5						nemarks
-	Engine oil	3 R	7.5 R	R	22.5 R	R	37.5 R	R	ວ∠.ວ R	R	67.5 R	R	6∠.5 R	90 R	97.5 R	R	112.5 R	120 R	
	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	•	п	n	n	n	n	n	n	n	п	n	n	n	п	n	п	n	n	For Non-
3	Spark plugs					R				R				R				R	turbo model
										R								R	For Turbo model
4	Drive belt(s)					ı				I				ı		R			
5	Camshaft drive belt					ı				I				ı		R			
6	Fuel line					(I)				(I)				(I)				I	Note (1)
7	Fuel filter					(R)				(R)				(R)				R	Note (1)
8	Air cleaner element					R				R				R				R	Note (2)
9	Cooling system					Ι				ı				ı				I	
10	Coolant					R				R				R				R	
11	Clutch system			I		ı		I		ı		I		ı		Ι		I	
12	Transmission oil					I				I				I				I	
13	ATF					I				I				I				I	Note (3)
	Front & rear differential oil					I				I				ı				I	
15	Brake line			-		ı		I		I		-		I		I		I	
16	Brake fluid					R				R				R				R	
17	Disc brake pads & discs					ı				ı				ı				I	
18	Brake linings and drums					ı				ı				ı				I	
19	Parking brake			ı		I		I		I		I		I		I		I	
20	Suspension			ı		I		I		I		I		I		I		I	
21	Wheel bearing									(l)								(I)	
22	Axle boots & joints			I				I				I		I		I		I	
23	Tire rotation		I	I	Ι		Ι	I	Ι		Ι	I	ı	I	I	I	I	I	Note (4)
	Steering system (Power steering)			I		I		I		I		I		I		I		I	
25	Supplement restraint system	Inspect every 10 years																	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE

- (1) This inspection is not required to maintain emission warranty eligibility and it dose not affect the manufacturer's obligations under EPA's in-use compliance program.
- (2) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- (3) ATF filter is a maintenance free part. ATF filter needs replacement, when it has physically damaged or ATF leaked.
- (4) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

B: MAINTENANCE SCHEDULE 2

Item	Every	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat tow- ing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles]					
Engine oil filter	3.75 months	R		R			R
	6,000 km]					
	3,750 miles]					
Fuel filter	15 months				I		
	24,000 km						
	15,000 miles						
Fuel line	15 months				I		
	24,000 km						
	15,000 miles						
Transmission oil	15 months						R
ATF	24,000 km]					
	15,000 miles	1					
ATF	15 months						R
	24,000 km]					
	15,000 miles]					
Front & rear differ-	15 months						R
ential oil	24,000 km	1					
	15,000 miles	1					
Brake line	15 months	I	I		I		I
	24,000 km	1					
	15,000 miles						
Brake fluid	15 months					R	
	24,000 km]					
	15,000 miles						
Disc brake pads &	15 months	I	I		I		I
discs	24,000 km	1					
	15,000 miles	1					
Brake linings and	15 months	I	I		I		I
drums	24,000 km	1					
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km	1					
	15,000 miles						
Suspension	7.5 months		I	I	I		I
	12,000 km	1					
	7,500 miles	1					
Axle boots & joints	7.5 months	I	I	I	I		I
	12,000 km]					
	7,500 miles						
Steering system	7.5 months	I	I	I	I		I
(Power steering)	12,000 km	1					
	7,500 miles	1					