


AIR INTAKE DUCT

INTAKE (INDUCTION)

3. Air Intake Duct

A: REMOVAL

1) Remove the bolts which install air intake duct on the front side of body.

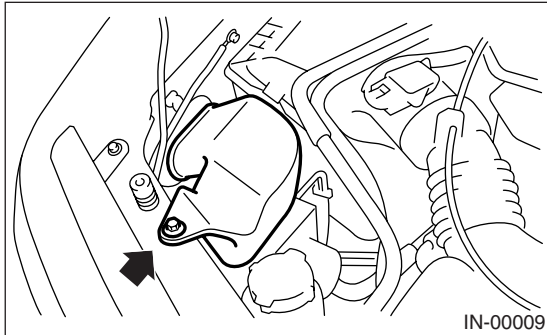


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

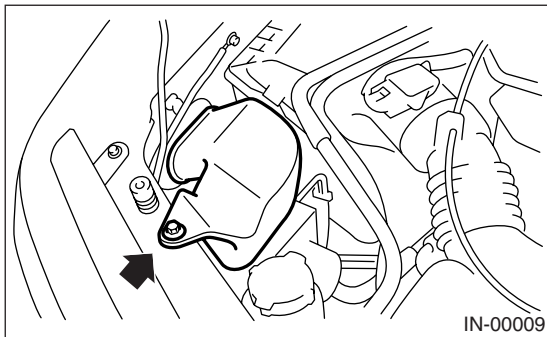

C: INSPECTION

1) Inspect for cracks and loose connections.
2) Inspect that no foreign objects are mixed in the air intake duct.