

GENERAL DESCRIPTION

EXHAUST

(1) Front exhaust pipe upper cover CTR	(15) Muffler	(29) Rear catalytic converter upper cover
(2) Front exhaust pipe lower cover CTR	(16) Cushion rubber	(30) Rear catalytic converter lower cover
(3) Clamp	(17) Rear exhaust pipe	(31) Rear catalytic converter
(4) Front exhaust pipe upper cover LH	(18) Lower clamp	
(5) Front exhaust pipe lower cover LH	(19) Center exhaust pipe upper cover	
(6) Front exhaust pipe	(20) Center exhaust pipe lower cover	
(7) Front exhaust pipe lower cover RH	(21) Protector	
(8) Front exhaust pipe upper cover RH	(22) Gasket	
(9) Gasket	(23) Front oxygen (A/F) sensor	
(10) Spring	(24) Front catalytic converter	
(11) Chamber	(25) Center exhaust pipe	
(12) Gasket	(26) Front catalytic converter lower cover	
(13) Gasket	(27) Front catalytic converter upper cover	
(14) Self-locking nut	(28) Rear oxygen sensor	

Tightening torque: N·m (kgf·m, ft·lb)

T1: 8 (0.8, 5.8)

T2: 13 (1.3, 9.4)

T3: 18 (1.8, 13.0)

T4: 21 (2.1, 15.2)

T5: 30 (3.1, 22.4)

T6: 35 (3.6, 26.0)

T7: 48 (4.9, 35.4)

B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.