


AT OIL TEMP WARNING LIGHT DISPLAY

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

10.AT OIL TEMP Warning Light Display

A: INSPECTION

When any on-board diagnostics item is malfunctioning, the display on AT OIL TEMP warning light blinks from the time malfunction is detected after starting the engine until ignition switch is turned to OFF. The malfunctioning part or unit can be determined by a DTC during on-board diagnostics operation. Problems which occurred previously can also be identified through the memory function. If the AT OIL TEMP warning light does not show a problem (although a problem is occurring), the problem can be determined by checking the performance characteristics of each sensor using Subaru Select Monitor. The AT OIL TEMP warning light signal is as shown in the figure.

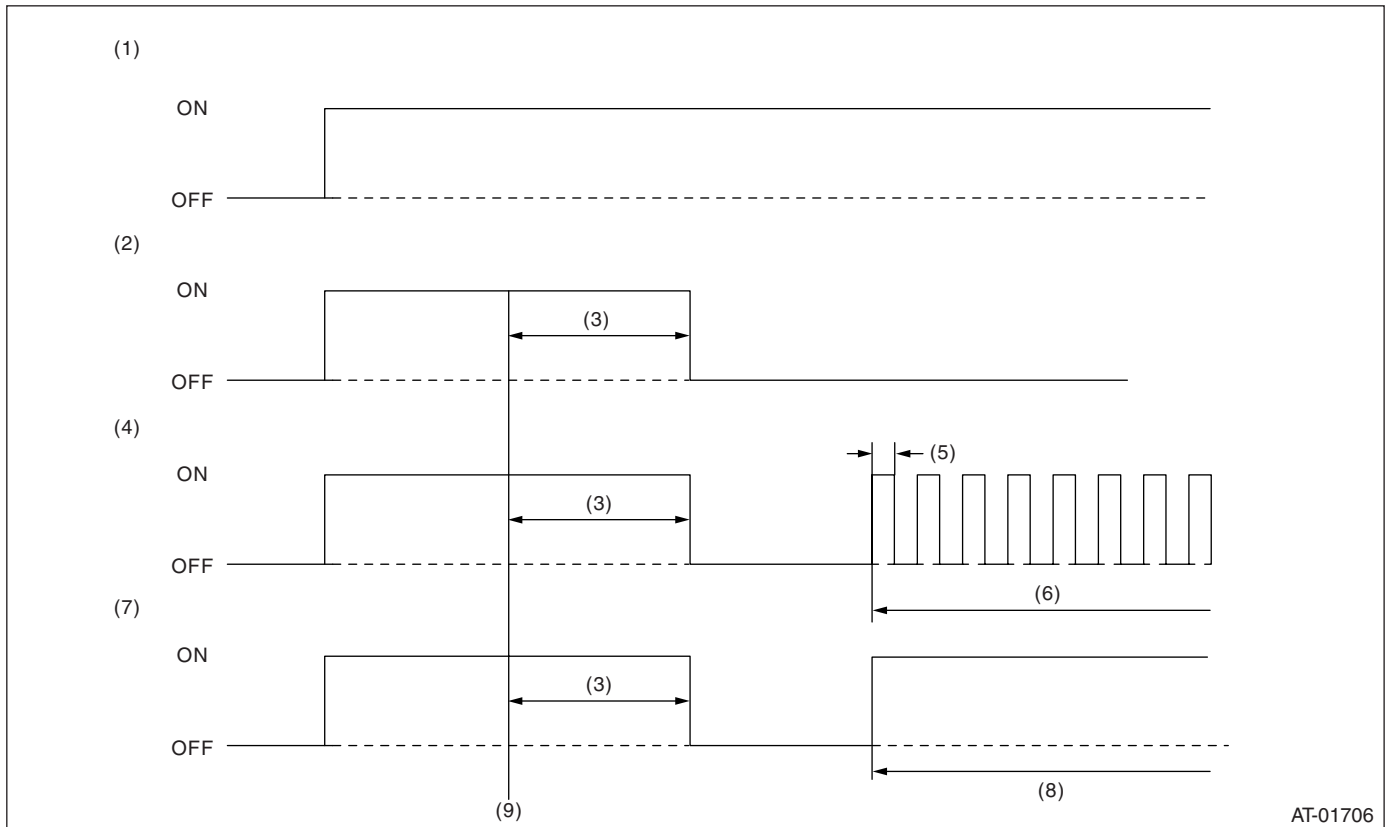

AT-01706

(1) Ignition switch (engine OFF)

(2) Normal

(3) 2 secs

(4) Abnormal (Trouble occurs)

(5) 0.25 secs

(6) Blink

(7) Normal (ATF temperature is high)

(8) ATF temperature is high

(9) Engine ON

NOTE:

ATF OIL TEMP warning light remains in illuminating engine starts.