

# GENERAL DIAGNOSTIC

## CONTROL SYSTEMS

### 9. General Diagnostic

#### A: INSPECTION

Symptom	Problem parts
Shift lock does not function.	<ul style="list-style-type: none"><li>• Stop light switch</li><li>• Shift lock solenoid</li><li>• Body integrated unit</li></ul>
Shift lock cannot be released.	<ul style="list-style-type: none"><li>• Stop light switch</li><li>• Shift lock solenoid</li><li>• Body integrated unit</li><li>• Inhibitor switch</li></ul>
Key interlock does not function.	<ul style="list-style-type: none"><li>• Key warning switch</li><li>• "P" range switch</li><li>• Key lock solenoid</li><li>• Body integrated unit</li></ul>
Key interlock cannot be released.	<ul style="list-style-type: none"><li>• Key warning switch</li><li>• "P" range switch</li><li>• Key lock solenoid</li><li>• Body integrated unit</li></ul>
Starter does not run.	<ul style="list-style-type: none"><li>• Inhibitor switch</li><li>• Select cable</li><li>• Starter circuit</li></ul>
Back-up light does not light up.	<ul style="list-style-type: none"><li>• Inhibitor switch</li><li>• Select cable</li><li>• Back-up light circuit</li></ul>