


# REAR SEALING COVER

## EXTERIOR BODY PANELS

### 7. Rear Sealing Cover

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-8, REMOVAL, Rear Speaker.>
- 4) Remove the door trim bracket.

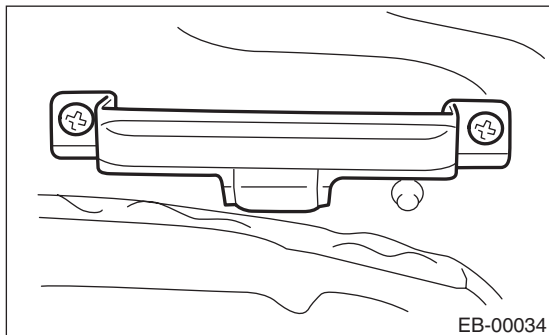

- 5) Remove the sealing cover.

#### NOTE:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If the cover gets broken, replace it with a new one.

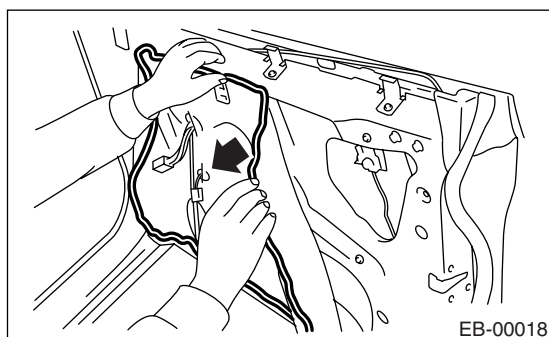

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing the sealing cover, use butyl tape.
- 3) Press the butyl tape-applied area firmly to prevent any floating on surface.

#### **Butyl tape:**

**3M8626 or equivalent**

#### NOTE:

- Apply an uniform bead of butyl tape.
- Attach the sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

#### C: INSPECTION

If the sealing cover is damaged, replace it with a new one.