


# REAR BUMPER

## EXTERIOR/INTERIOR TRIM


### 5. Rear Bumper

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the bolts and clips.

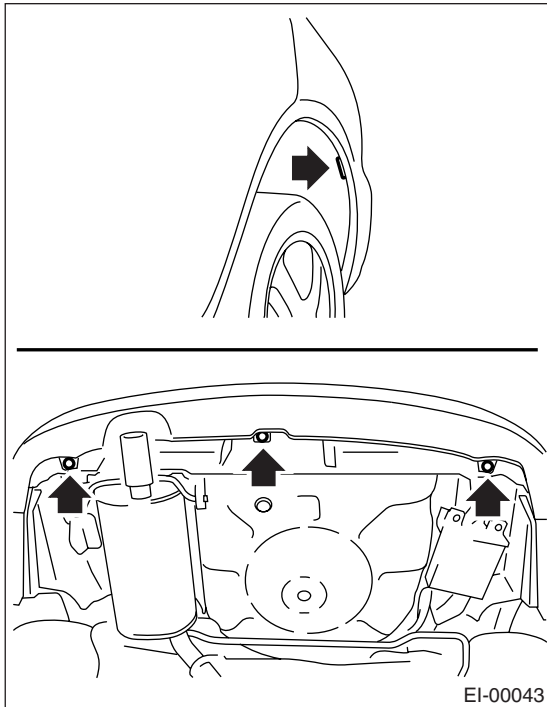

- 3) Remove the clips from bumper and bracket.

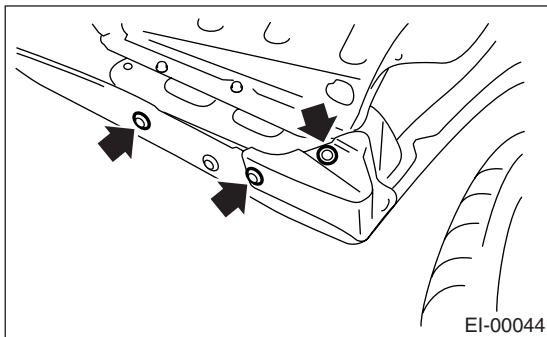


- 4) When removing the rear bumper beam assembly, remove the six bolts on bumper stay.

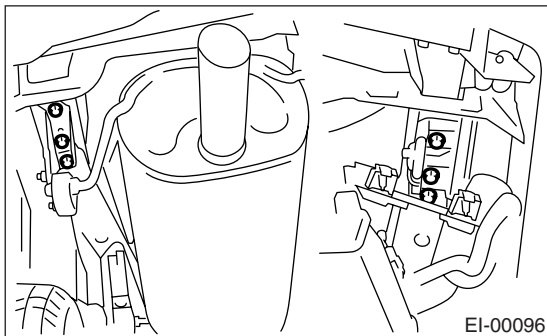


- 5) Remove the rear combination light assemblies from each side. <Ref. to LI-18, REMOVAL, Rear Combination Light Assembly.>

- 6) Remove the two clips from each side.

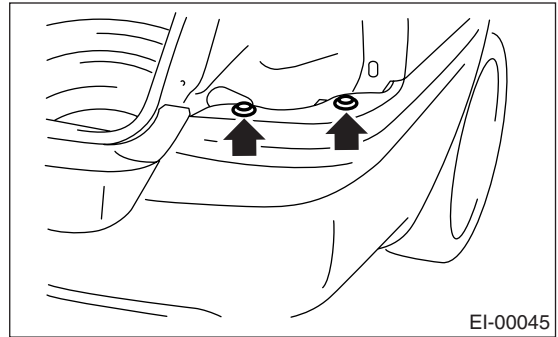


- 7) Remove the floor box.
- 8) Remove the rear skirt trim.
- 9) Loosen the four nuts to remove rear bumper.

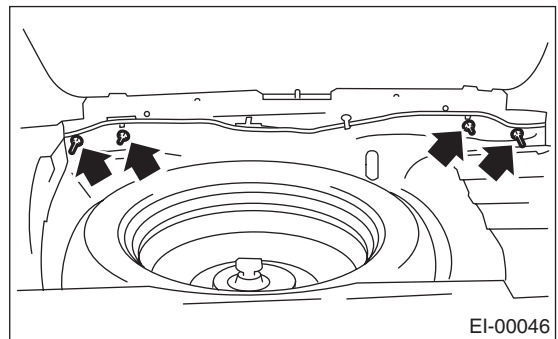


#### NOTE:

Two persons are required when removing rear bumper assembly.


- 10) Remove the bolt to remove bracket from bumper.

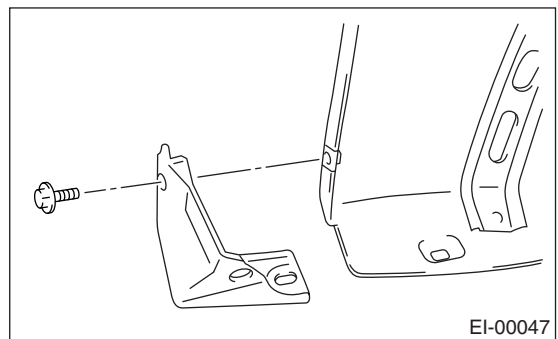

- 11) Disengage the clips to remove bumper upper beam.

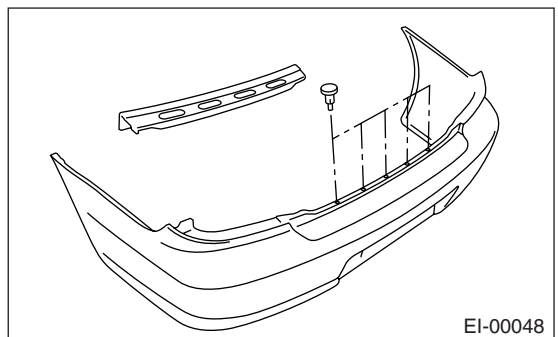

12) Remove the four bolts to remove side bracket and bumper stay.

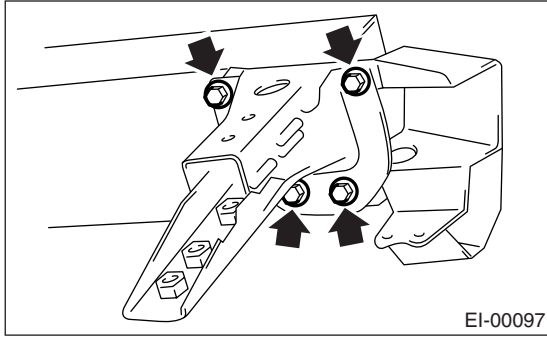

## **B: INSTALLATION**

Install in the reverse order of removal.

### ***Tightening torque:***

***Refer to COMPONENT in General Description.***

***<Ref. to EI-5, REAR BUMPER, COMPONENT, General Description.>***

## **C: REPAIR**

Refer to front bumper repair. <Ref. to EI-19, REMOVAL, Front Bumper.>