

HEATER DUCT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

22.Heater Duct

A: REMOVAL

- 1) Remove the front seat. <Ref. to SE-6, REMOVAL, Front Seat.>
- 2) Remove the front side sill cover.
- 3) Pull off the floor mat, remove the cover, and then remove the heater duct.

B: INSTALLATION

Install in the reverse order of removal.