


HEATER VENT DUCT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

23.Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel. <Ref. to EI-37, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the screws.
- 3) Remove the heater vent duct.

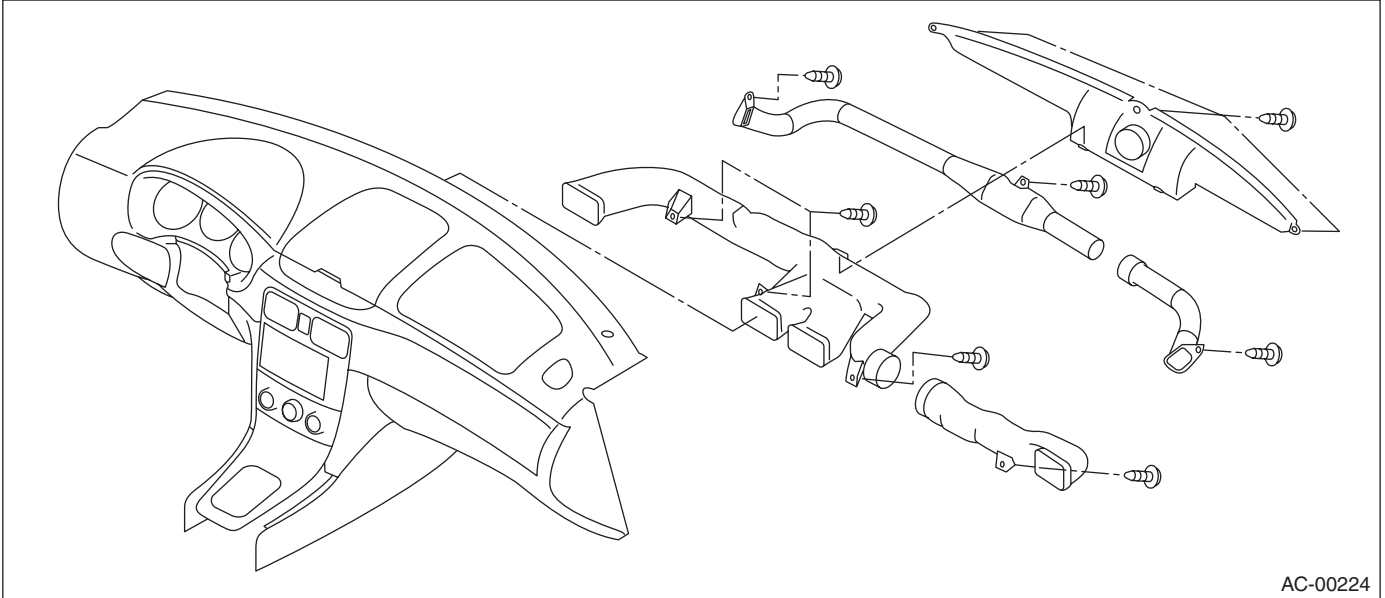

AC-00224

B: INSTALLATION

Install in the reverse order of removal.