



7. Front Door Latch Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-27, REMOVAL, Front Inner Remote.>
- 5) Remove two bolts and nut, and then remove the guide rail.

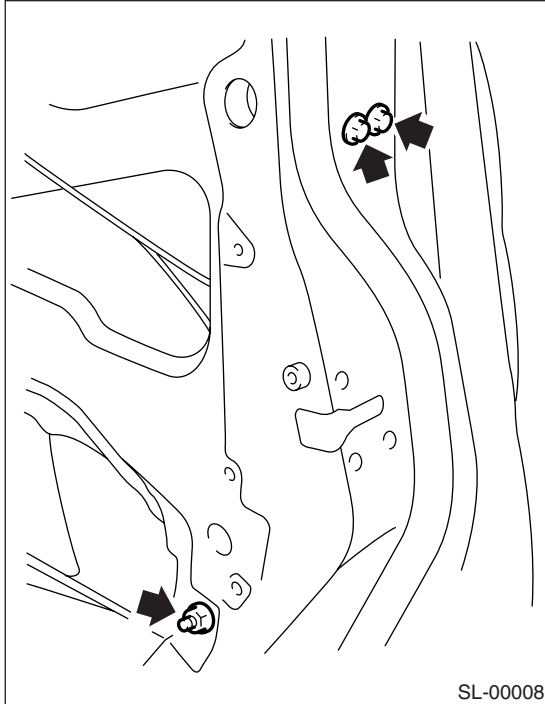

- 6) Remove the three screws and bolt.

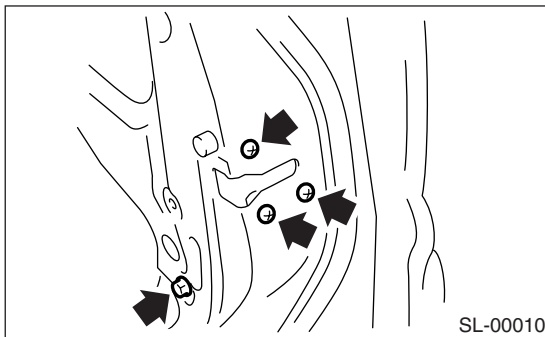

- 7) Remove the front door latch assembly, and then disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable work smoothly.