
# 13. Rear Gate Outer Handle

### A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-45, RE-MOVAL, Rear Gate Trim.>
- 2) Remove the rear wiper motor assembly.
- <Ref. to WW-17, REMOVAL, Rear Wiper Motor.>
- 3) Remove the rear finisher.
- 4) Remove the cable, and then remove two nuts.

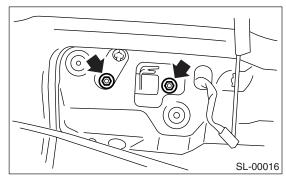

5) Remove the rear gate outer handle.

### **B: INSTALLATION**

Install in the reverse order of removal.

#### NOTE

Make sure the outer handle works properly after installation.

## C: INSPECTION

- 1) Inspect the cable for deformation.
- 2) Make sure the lever and cable move smoothly.