
LUBRICATION

OIL AND FILTER LU–1
OIL PUMP LU–2
OIL COOLER LU–3

REFER TO 3S–FE ENGINE REPAIR MANUAL (Pub No. RM395E)

NOTE: The above pages contain only the points which differ from the above listed manual.

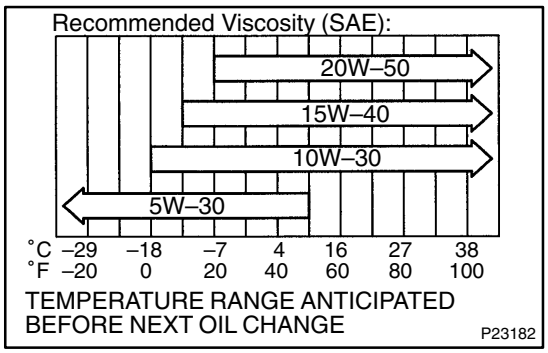

OIL AND FILTER

INSPECTION

LU07O–01

CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.


Oil grade:

API grade SH, Energy–Conserving II or SJ, Energy–Conserving or ILSAC multigrade engine oil. Recommended viscosity is as shown in the illustration.

OIL PUMP

COMPONENTS


LU07P–01

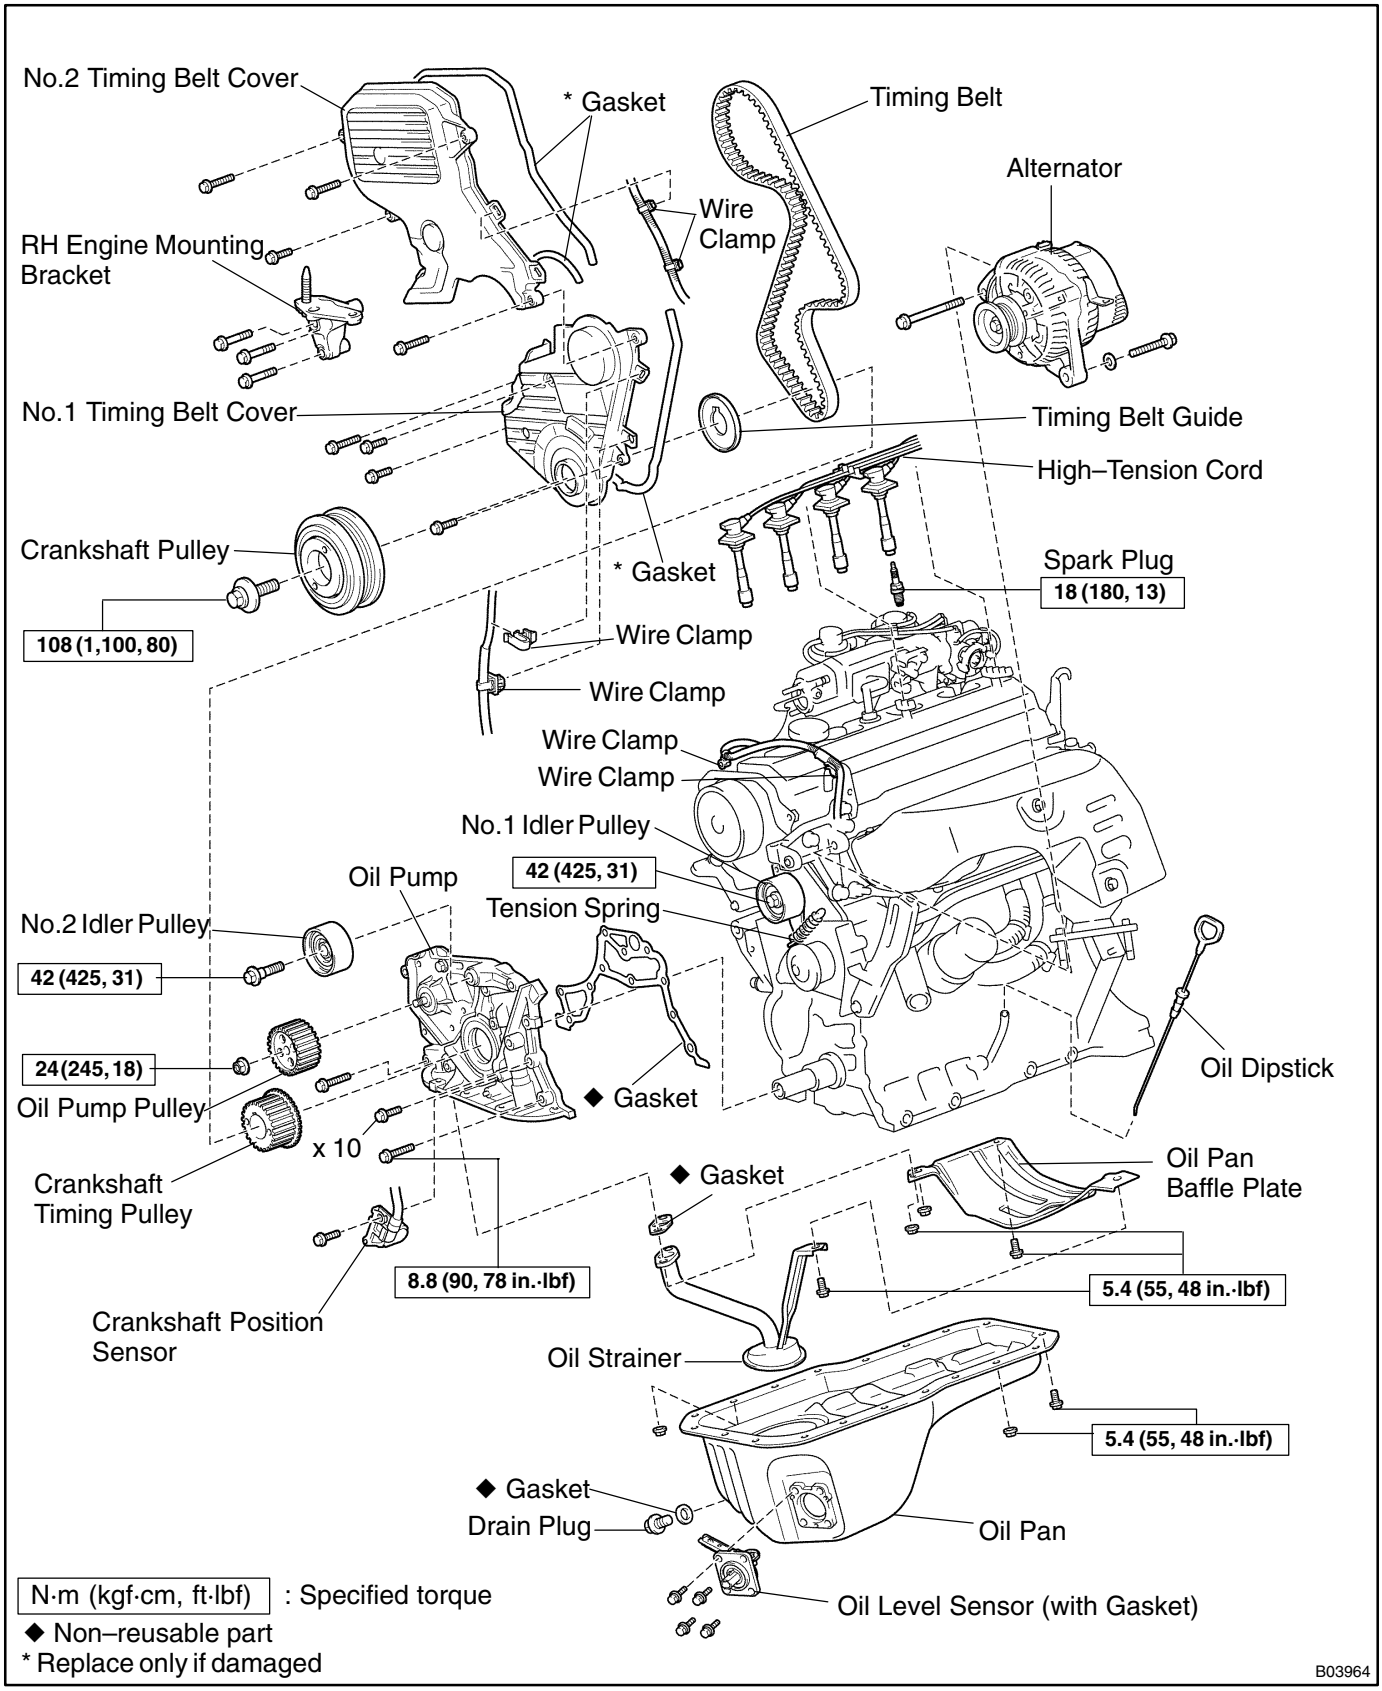


OIL COOLER

COMPONENTS

LU07Q–01

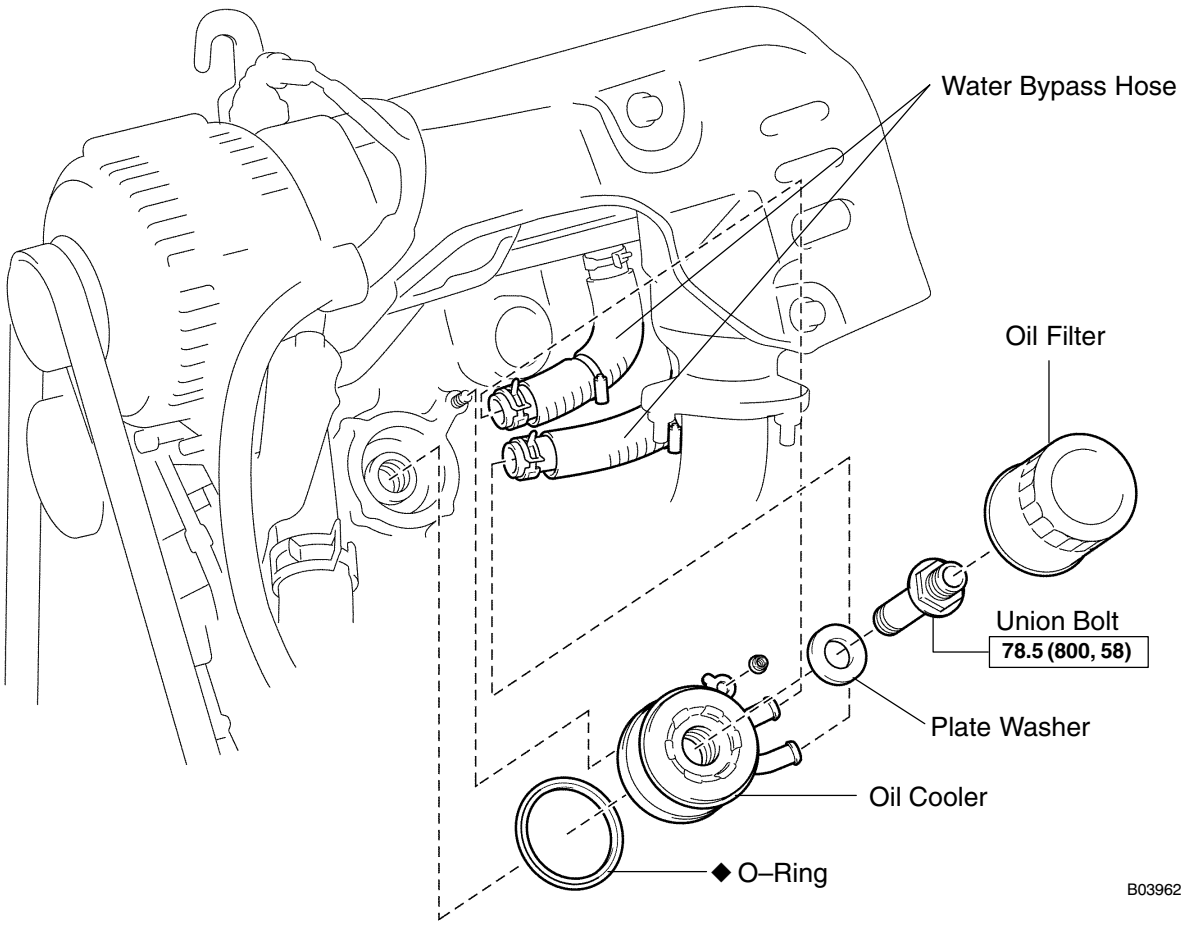

w/o TWC

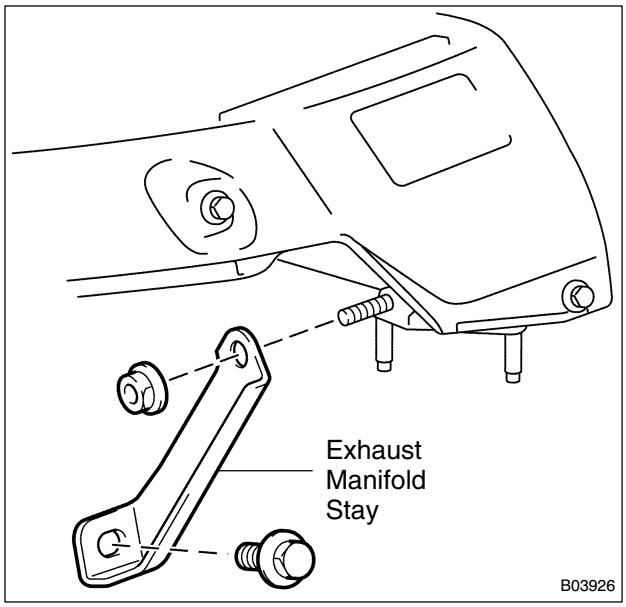

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B03925